


Forced Air System

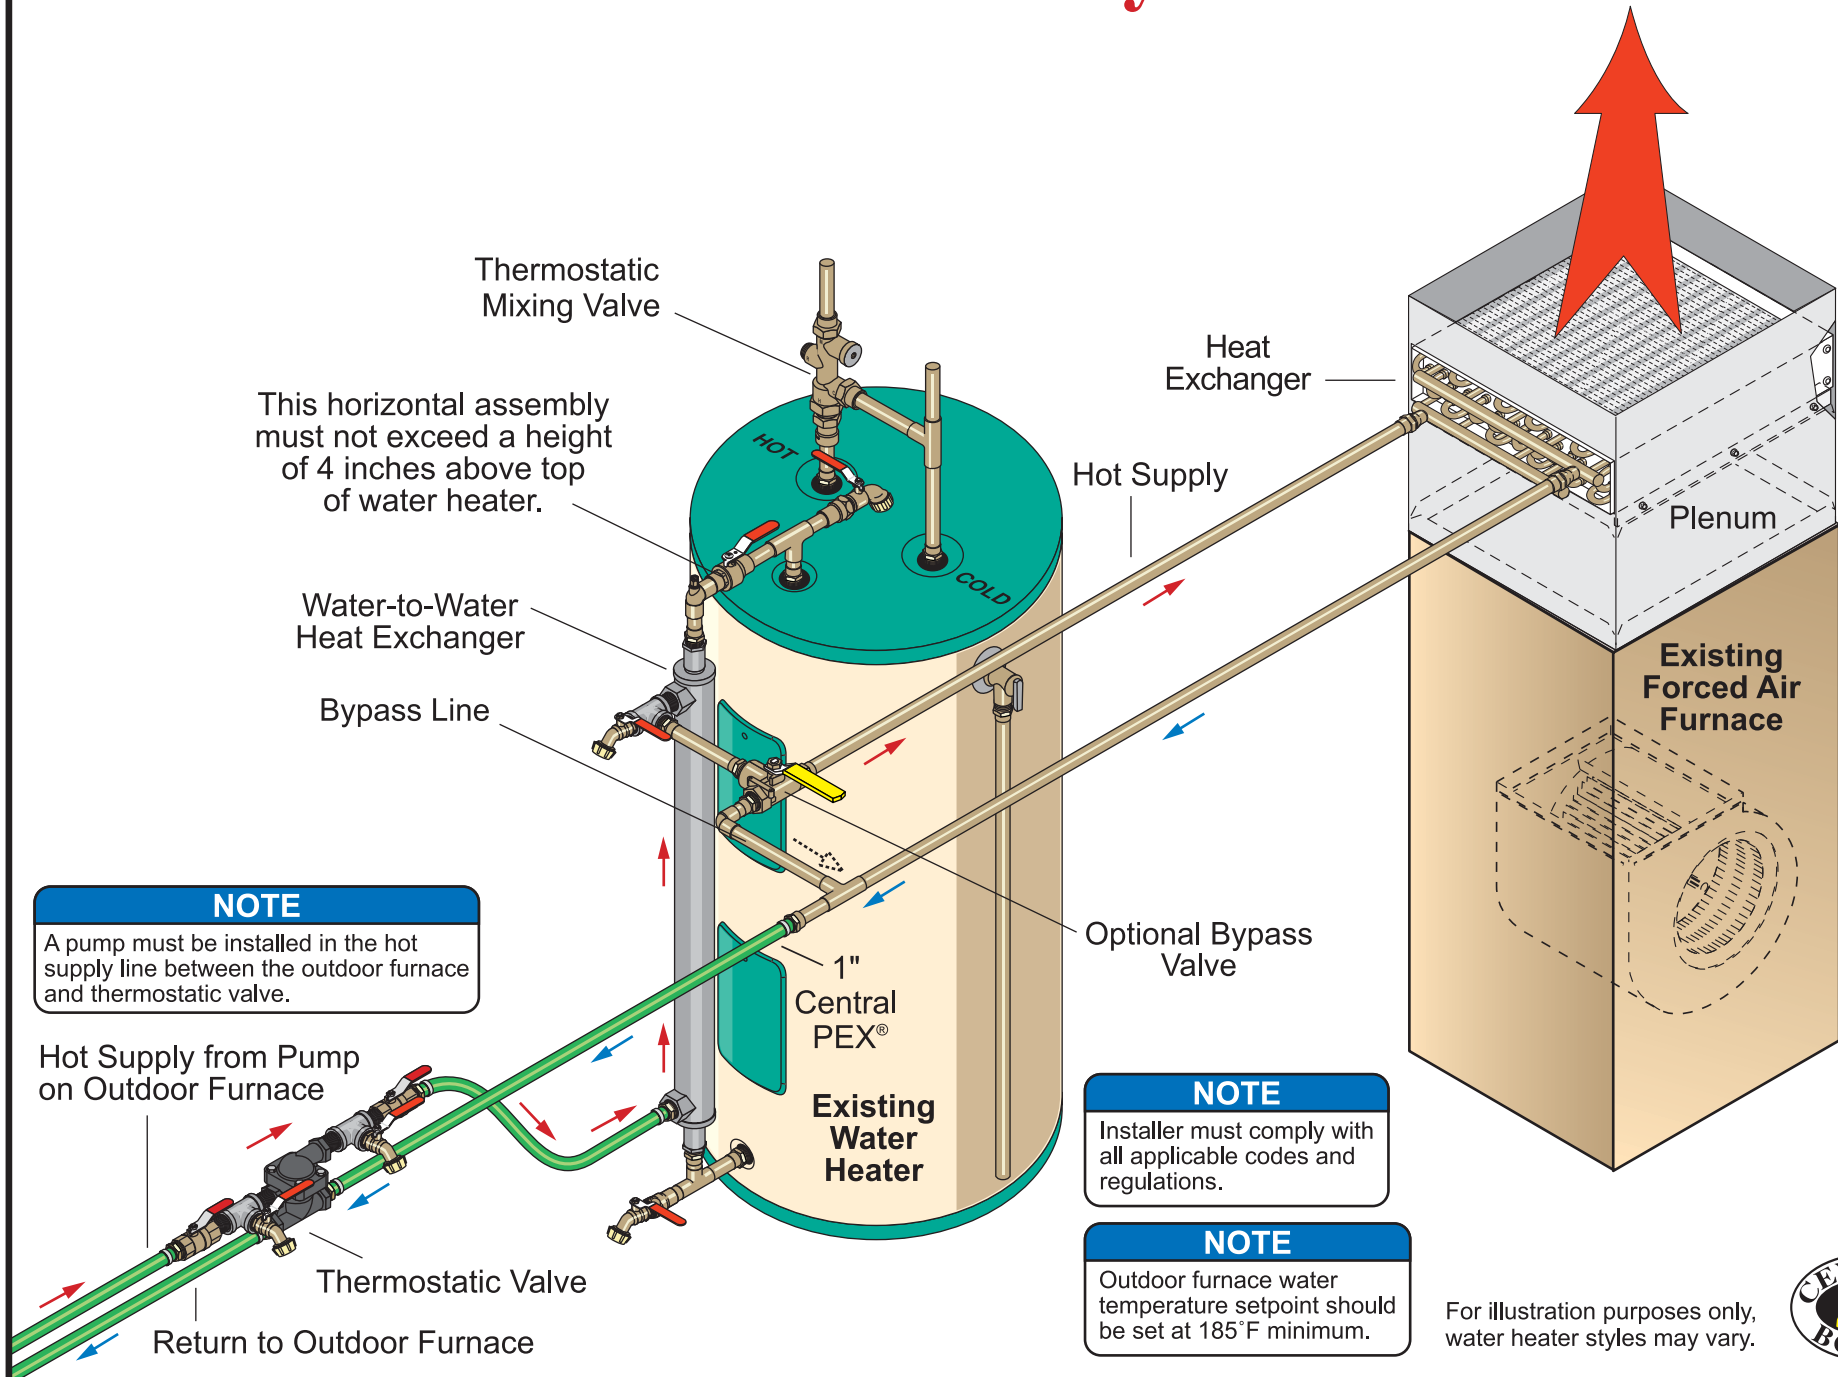

This horizontal assembly must not exceed a height of 4 inches above top of water heater.

NOTE
A pump must be installed in the hot supply line between the outdoor furnace and thermostatic valve.

Hot Supply from Pump on Outdoor Furnace

NOTE
Installer must comply with all applicable codes and regulations.

NOTE
Outdoor furnace water temperature setpoint should be set at 185°F minimum.

For illustration purposes only, water heater styles may vary.

