


# Existing Boiler (Direct Plumbed) Depressurized

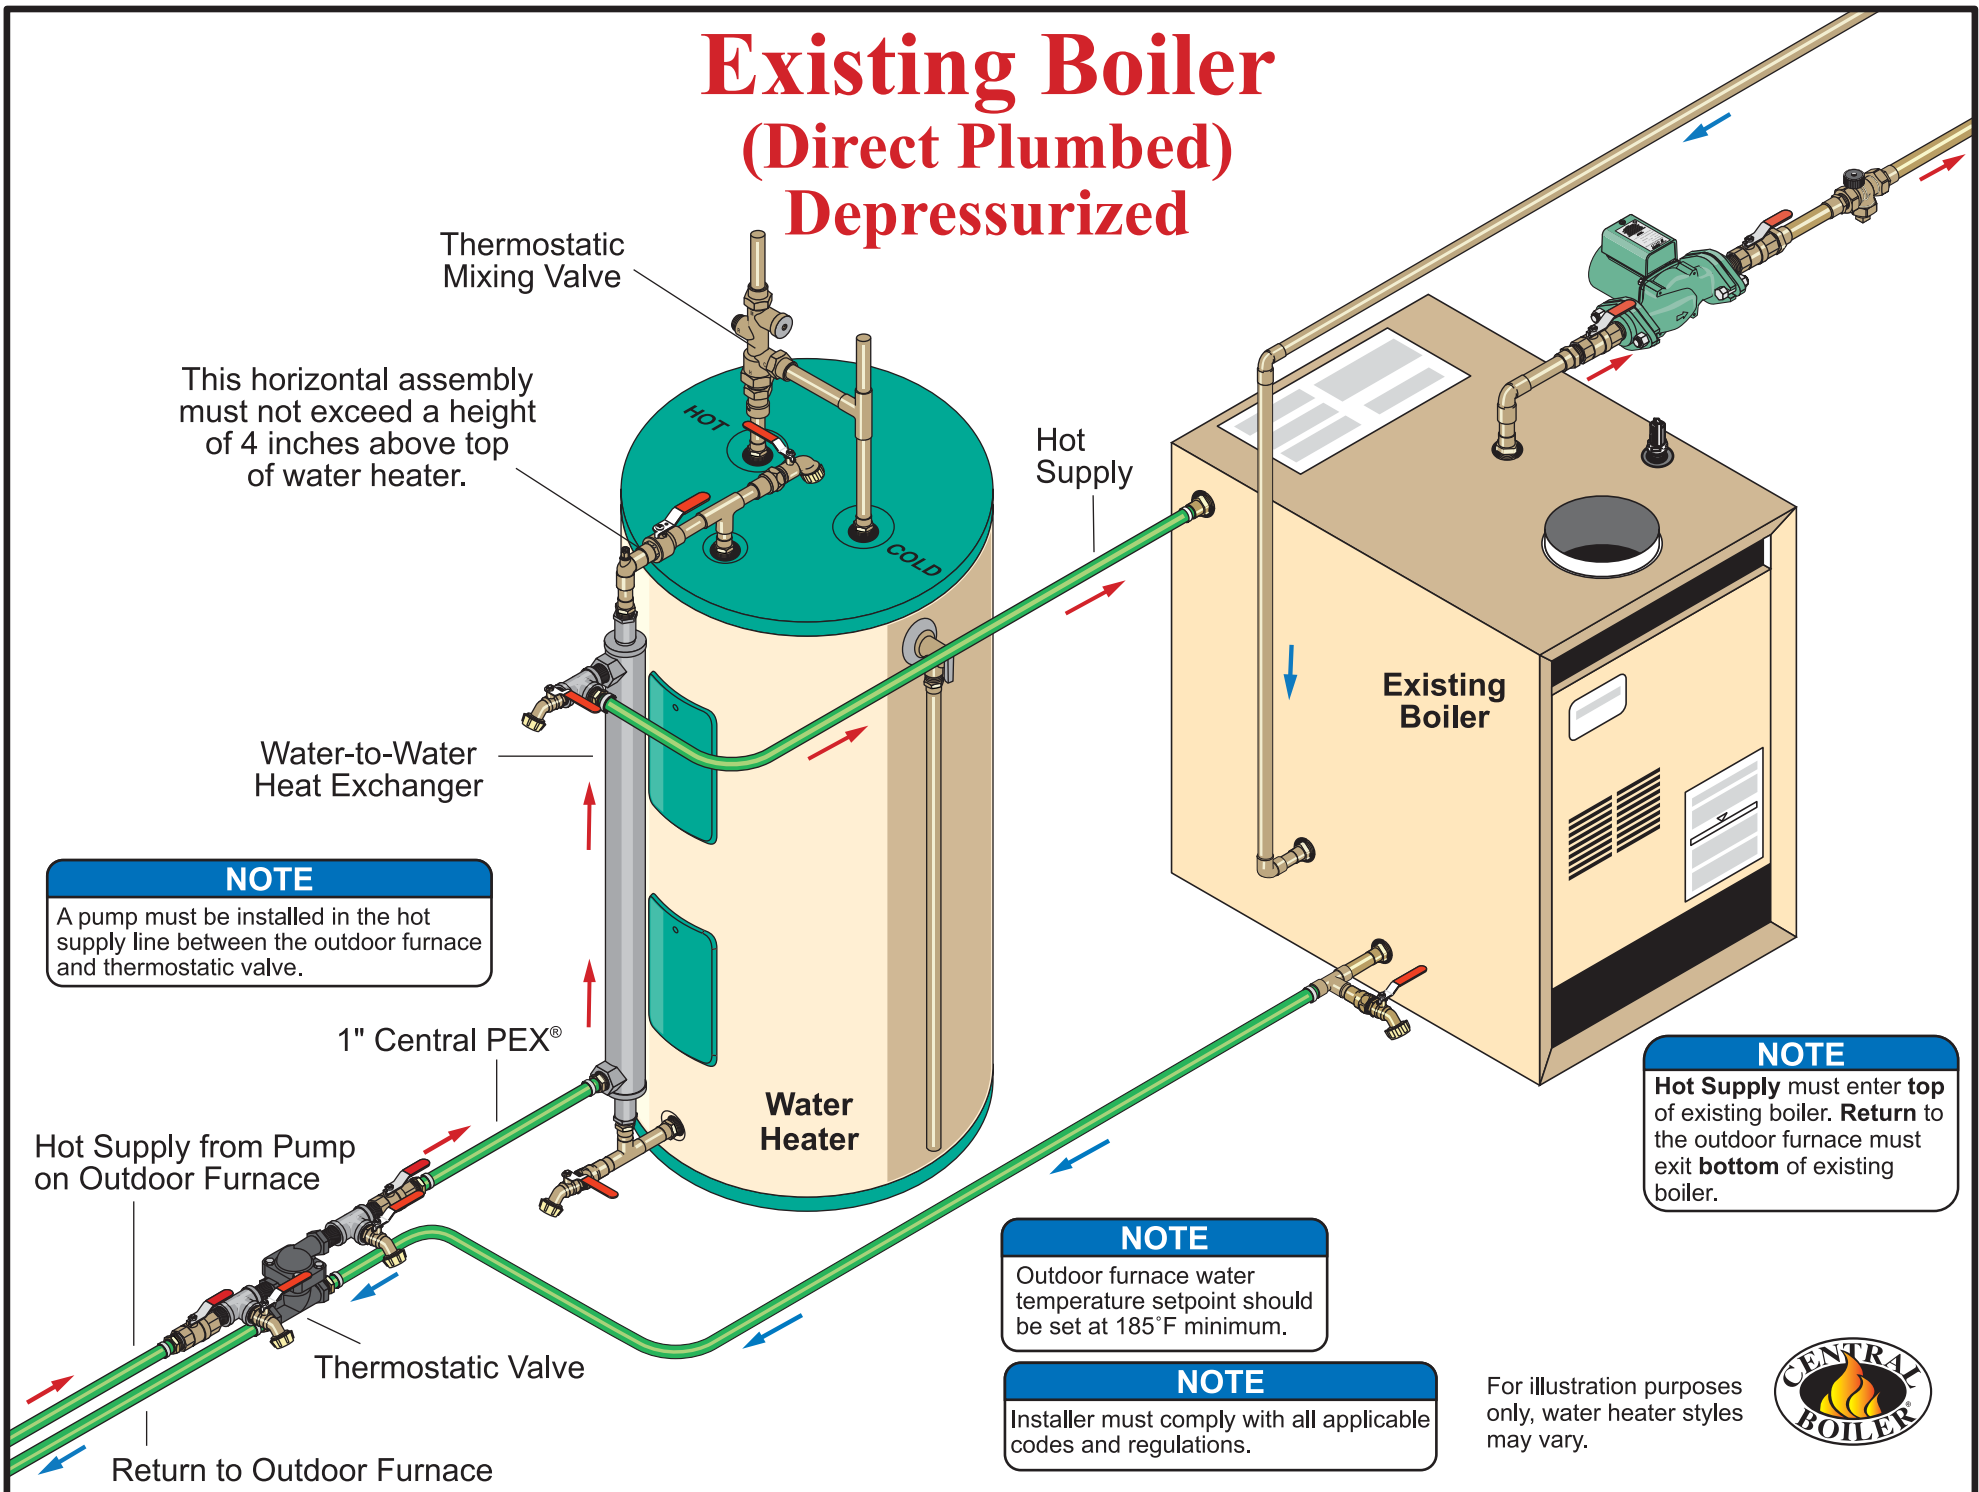

**NOTE**  
A pump must be installed in the hot supply line between the outdoor furnace and thermostatic valve.

**NOTE**  
Hot Supply must enter top of existing boiler. Return to the outdoor furnace must exit bottom of existing boiler.

**NOTE**  
Outdoor furnace water temperature setpoint should be set at 185°F minimum.

**NOTE**  
Installer must comply with all applicable codes and regulations.

For illustration purposes only, water heater styles may vary.

